


# INSTALLATION GUIDE

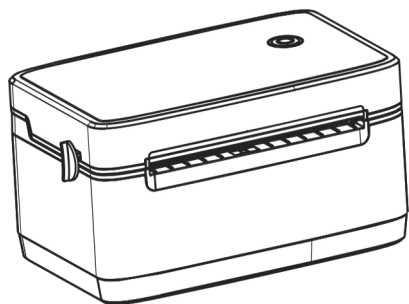

## Attention:

1. Do not plug in the power cable before using the printer, and do a check on the printer first.
2. If you need to clean the print head, please wait for the alcohol to dry before testing and check the effect after cleaning.
3. Avoid letting items fall into the printer, it will affect the function of the printer.

Scan to get the driver files:

[www.zyprinter.net/CD\\_FILES.zip](http://www.zyprinter.net/CD_FILES.zip)

More downloads:



[www.emlabel.net/fileDownload/](http://www.emlabel.net/fileDownload/)



Scan to get the driver files




More downloads

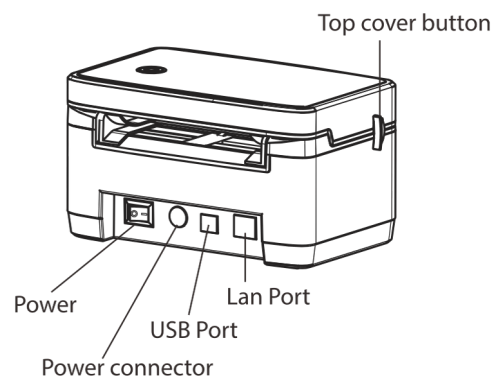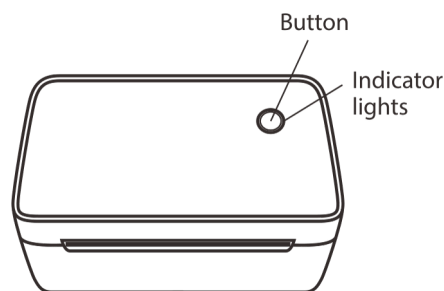


## 1 PRINTER INSTALLATION

1. Make sure the power button is off and plug in the printer's power cable.
2. Connect the included cable (USB) from the printer to the computer.
3. Turn on power button.

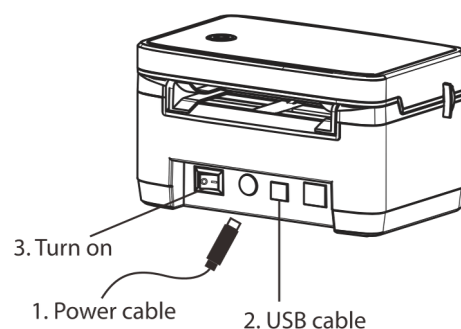


## 2 PAPER INSTALLATION

1. Open the top cover.
2. Put in the media paper from back, make sure the printing face on top.

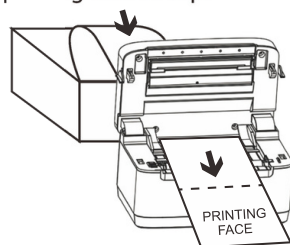


3. Adjust the right & left media guide to fix with the media paper.

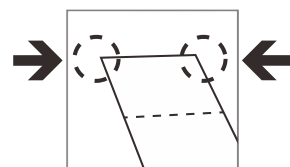

4. Close the top cover and the paper calibration will start automatically.

## 3 PAPER CALIBRATION

1. Please complete the paper installation.
2. Close the top cover and the paper calibration will start automatically.
3. The printer will automatically feed and calibrate the paper.

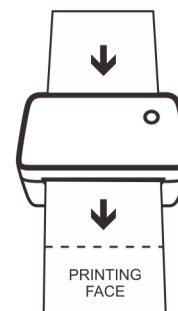

4. After the calibration is completed, the paper will automatically return to the printing area.
5. The indicator light turn to blue (steady), the printer is done calibration.


## 4 BUTTON FUNCTION

### 1. Next sheet paper

- After the printer is ready (blue steady light), click the button once and the paper will go to the next sheet.


### 2. Pause printing

- When printer is printing, click the button once to pause printing (blue flashing light). Click the button again to continue printing.

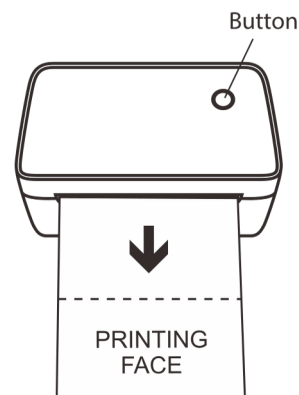

## 5 TEST PRINT

1. Please complete paper installation and calibration.
2. Turn off the printer power.
3. Press the button and don't release it, turn on the power at the same time, wait for about 2 seconds hear the beep sound, and release the button.
4. Printer will start test print.

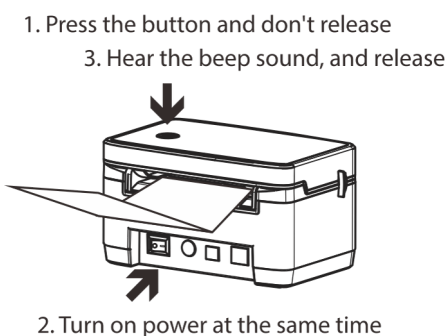

## 6 RESET PRINTER

1. Please complete paper installation and calibration.
2. Turn off the printer power.
3. Press the button and don't release it, turn on the power at the same time, wait for about 25 seconds the indicator light turn red flashing, and release the button.
4. Printer will complete reset.

